





**2013 CPC 707 & 719**

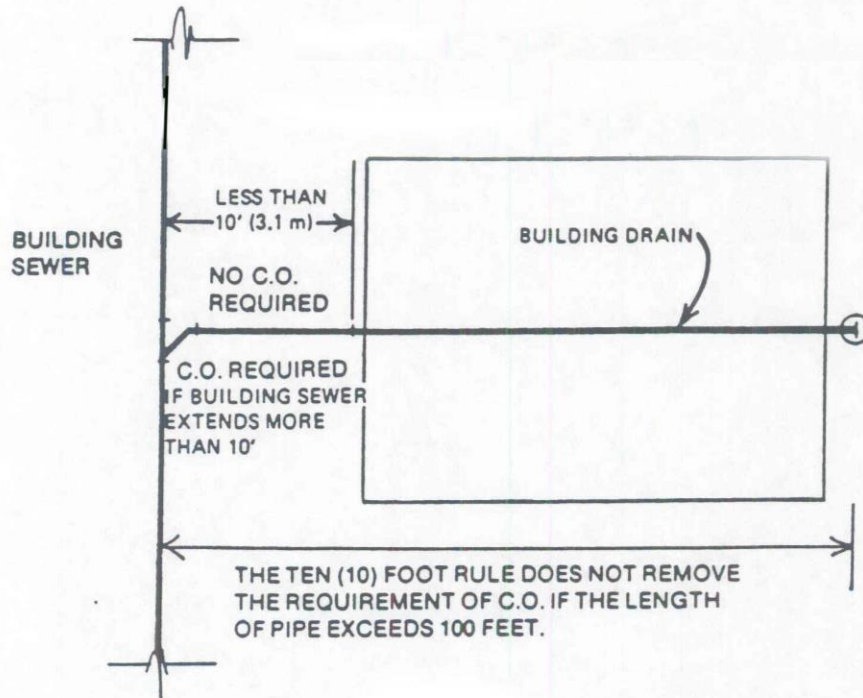

All required building sewer cleanouts shall be extended to grade, and, when any part of a building sewer is under a building, the cleanout requirements of Section 406 shall apply.

Fig. 11-6 illustrates the proper location of cleanouts.

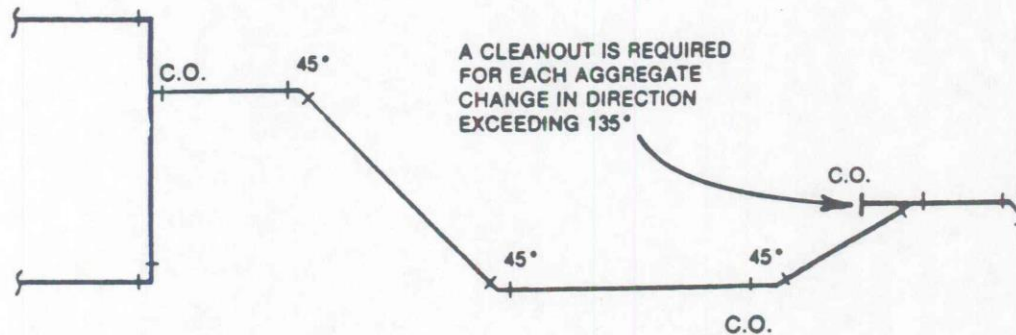

Up to 135 degree change of direction is permitted without a cleanout, as long as the run of pipe does not exceed 100 feet between cleanouts.

Each cleanout shall be installed so that it opens to allow cleaning in the direction of flow in the soil or waste pipe or at right angles thereto, and except in the case of a wye branch and end-of-line cleanouts, vertically above the flow of the pipe.